

10 and 40 SERIES RATCHET ARM REPAIR

Simple instructions for maintaining any Lowell 10 or 40 Series Ratchet Arm



1. Remove all parts, clean inside of wrench and all parts



2. Lightly lubricate the inside of wrench where the pawls sit with lithium grease. Replace pawls, pawl springs and shifter



3. Replace gear, cover plate and cover screws



4. Secure cover plate screws

Model	Repair Kit*	Cover Plate Kit**
11	11902	11903
12 & 13	13902	13903
14 & 15	15902	15903
16 & 17	16902	16903
41 & 42	41902	41903
44	44902	44903
45 & 46	46902	46903
47	47902	47903
48	48902	48903

*Repair Kits include – pawls (2), pawl springs (2) and shifter (1)

**Cover Plate Kits include – cover plate (1), and cap screw (1 or more)